
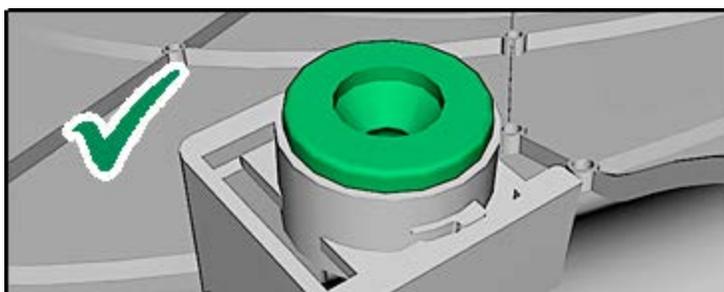


Removing and installing engine cover panel

Removing

- Pull engine cover off upwards at securing points -arrows-.

Installing

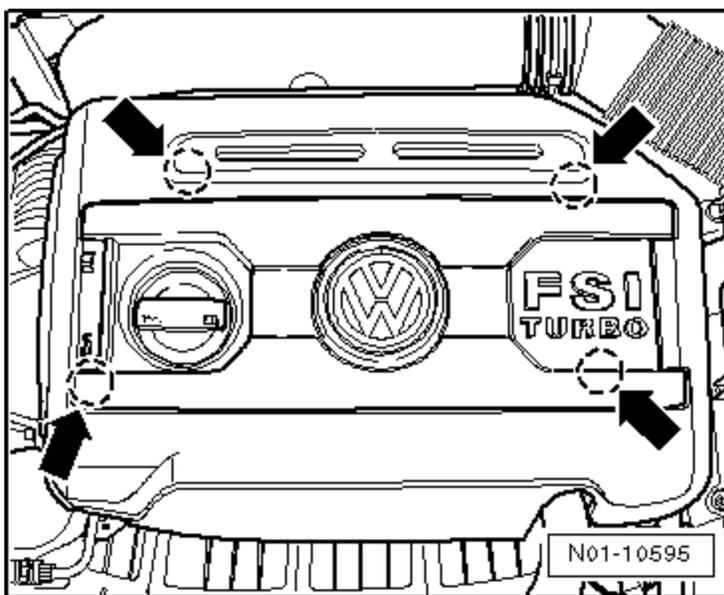

- When installing, make sure that rubber buffers are correctly inserted into mountings.
- Press engine cover panel back carefully into its retainers.
- To avoid damage, do not strike the engine cover panel with your fist or with any kind of tool.

